

MaxiSys_Rolls-Royce_V4.10 Function List (Note:For reference only)

NOTES:

- This function is supported. ✖ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
RR1/RR2/RR3	Drive	CAS Car Access System	●	●	●	●	●	●	○
RR1/RR2/RR3	Drive	DME Motor Electronics	●	●	●	●	●	●	○
RR1/RR2/RR3	Drive	DME Digital Motor Electronics 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Drive	EGS transmission management	●	●	●	●	●	●	○
RR1/RR2/RR3	Drive	EKPS Fuel-pump control	●	●	●	●	●	●	○
RR1/RR2/RR3	Drive	VTC Valvetronic	●	●	●	●	●	●	○
RR1/RR2/RR3	Drive	VTC2 Valvetronic 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	ACC Active Cruise Control	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	ACC2 Active cruise control 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	ARS Dynamic Drive	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	ARS Dynamic Drive 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	CIM Chassis Integration Module	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	CIM2 Chassis Integration Module 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	DSC Dynamic Stability Control	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	EDC Damper Control	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	EHC Electronic Ride-Height Control	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	EMF Parking brake	●	●	●	●	●	●	○
RR1/RR2/RR3	Chassis	RDC Tyre pressure control	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	CEM Clean Energy Module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	AHL Adaptive directional headlights	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	AHM Trailer module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	AMP Amplifier	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	ANT Aerial/antenna tuner	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	ASK Audio system controller	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	BZM Control centre,centre console	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	FBZM Rear compartment,control centre,centre console	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	CD Control Display	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	CD-GW Control Display (Gateway)	●	●	●	●	●	●	○

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
RR1/RR2/RR3	Body	SG-FD Control unit, rear-compartment display	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SG-FD-GW Control unit, rear-compartment display(gateway)	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	FD Rear-compartment display	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	CDC CD Changer	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	CON Controller	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	FCON Rear compartment controller	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	DWA anti-theft alarm system	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	IHKA Integrated automatic heating/air conditioning	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	FKA Rear heater/air conditioning	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	HKL Rear-lid lift	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	JBIT Japan Basis Interface Telephone	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	KHI Headset interface	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	INSTR Instrument cluster	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	LM Lights Module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	LM2 Light module 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	LM2 Light module 2 with adaptive headlight	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	LM2 AHL2 Light module 2 with adaptive headlight 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	FLA High Beam Assist	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	FBI Flexible Bus Interface	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	DVDC DVD Changer	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	DAB Digital tuner	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	NAV Navigation computer	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	JNAV Navigation system, Japan	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	KNAV Navigation system, Korea	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	CNAV Navigation system, China	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	NAJ Navigation computer, Japan	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	NVK Night Vision camera	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	NVE Night Vision Electronics	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	PDC Park Distance Control	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	CA Comfort access system	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	RLS Rain/Light Sensor	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	PM Power Module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SASL Satellite, A-pillar, left	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SASR Satellite, A-pillar, right	●	●	●	●	●	●	○

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
RR1/RR2/RR3	Body	SBSL Satellite, B-pillar, left	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SBSR Satellite, B-pillar, right	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SFZ Satellite vehicle centre	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SSBF Satellite, seat, passenger	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SSFA Satellite, seat, driver	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SSH Satellite, seat, rear	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	STVL Satellite, door, front left	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	STVR Satellite, door, front right	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SHD Sliding/tilting sunroof	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SHD Slide/tilt sunroof 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SINE Siren and tilt sensor	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SMFA Seat module, driver	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SMBF Seat module, passenger	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SMFAH Seat module, driver's side, rear	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SMBFH Seat module, passenger's side, rear	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SDARS Satellite tuner	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SHZH Independent/auxiliary heater	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SVS Language processing system	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SZL Switch centre, steering column	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SEC2 Supplementary control unit 2	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	IBOC Digital tuner US	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	TEL Telephone interface	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	TEL Telephone(USA)	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	TCU Telematic Control Unit	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	TMBFT Door module, passenger door	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	TMBFH Door module, passenger's side, rear	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	TMFAT Door module, driver's door	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	TMFAH Door module, driver's side, rear	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	VM Video Module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	WIM Wiper module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	ZBM Two-battery management	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	ZGM Central Gateway Module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SIM Safety and Information Module	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SGM-ZGM Safety and Gateway Module (ZGM)	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	SGM-SIM Safety and Gateway Module (SIM)	●	●	●	●	●	●	○
RR1/RR2/RR3	Body	MOST system analysis	●	●	●	●	●	●	○

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
RR1/RR2/RR3	Body	CAN communication analysis	●	●	●	●	●	●	○
RR4/RR5	Drive	CAS Car Access System	●	●	●	●	●	●	○
RR4/RR5	Drive	DDE Diesel Electronics	●	●	●	●	●	●	○
RR4/RR5	Drive	DME Digital Motor Electronics	●	●	●	●	●	●	○
RR4/RR5	Drive	DME Digital Motor Electronics 2	●	●	●	●	●	●	○
RR4/RR5	Drive	EGS transmission management	●	●	●	●	●	●	○
RR4/RR5	Drive	EKPS Fuel-pump control	●	●	●	●	●	●	○
RR4/RR5	Drive	GWS Gear selector switch	●	●	●	●	●	●	○
RR4/RR5	Chassis	AL active steering	●	●	●	●	●	●	○
RR4/RR5	Chassis	DSC Dynamic Stability Control	●	●	●	●	●	●	○
RR4/RR5	Chassis	EDCSHL Damper satellite, rear left	●	●	●	●	●	●	○
RR4/RR5	Chassis	EDCSHR Damper satellite, rear right	●	●	●	●	●	●	○
RR4/RR5	Chassis	EDCSVL Damper satellite, front left	●	●	●	●	●	●	○
RR4/RR5	Chassis	EDCSVR Damper satellite, front right	●	●	●	●	●	●	○
RR4/RR5	Chassis	EHC Electronic Ride-Height Control	●	●	●	●	●	●	○
RR4/RR5	Chassis	EMF Parking brake	●	●	●	●	●	●	○
RR4/RR5	Chassis	ICM Integrated Chassis Management	●	●	●	●	●	●	○
RR4/RR5	Chassis	VDM Vertical Dynamics Management	●	●	●	●	●	●	○
RR4/RR5	Chassis	VDM2 Vertical dynamics management	●	●	●	●	●	●	○
RR4/RR5	Body	ACC Active Cruise Control	●	●	●	●	●	●	○
RR4/RR5	Body	ACSM Crash Safety Module	●	●	●	●	●	●	○
RR4/RR5	Body	AHM Trailer module	●	●	●	●	●	●	○
RR4/RR5	Body	AMPT Top Hi-Fi amplifier	●	●	●	●	●	●	○
RR4/RR5	Body	CBX-ECALL Combox emergency call	●	●	●	●	●	●	○
RR4/RR5	Body	CBX-MEDIA Combox Multimedia	●	●	●	●	●	●	○
RR4/RR5	Body	CIC Car Information Computer	●	●	●	●	●	●	○
RR4/RR5	Body	CID Central Information Display	●	●	●	●	●	●	○
RR4/RR5	Body	CON Controller	●	●	●	●	●	●	○
RR4/RR5	Body	DVDC DVD Changer	●	●	●	●	●	●	○
RR4/RR5	Body	EMALI Electric-motor reel, left	●	●	●	●	●	●	○
RR4/RR5	Body	EMARE Electric-motor reel, right	●	●	●	●	●	●	○
RR4/RR5	Body	EME Electric machine electronics	●	●	●	●	●	●	○
RR4/RR5	Body	EME2 Electrical machine electronics	●	●	●	●	●	●	○
RR4/RR5	Body	FCON Rear compartment controller	●	●	●	●	●	●	○
RR4/RR5	Body	FD Rear-compartment display	●	●	●	●	●	●	○
RR4/RR5	Body	FD2 Rear-compartment display 2	●	●	●	●	●	●	○
RR4/RR5	Body	FKA Rear heater/air conditioning	●	●	●	●	●	●	○

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
RR4/RR5	Body	FLA High Beam Assist	●	●	●	●	●	●	○
RR4/RR5	Body	FRM Footwell module	●	●	●	●	●	●	○
RR4/RR5	Body	FZD Function centre, roof	●	●	●	●	●	●	○
RR4/RR5	Body	GZAL Targeted illumination, left	●	●	●	●	●	●	○
RR4/RR5	Body	GZAR Targeted illumination, right	●	●	●	●	●	●	○
RR4/RR5	Body	HKA Rear-cabin automatic A/C	●	●	●	●	●	●	○
RR4/RR5	Body	HKL Rear-lid lift	●	●	●	●	●	●	○
RR4/RR5	Body	HSR Rear-axle slip-angle control	●	●	●	●	●	●	○
RR4/RR5	Body	HUD Head-Up Display	●	●	●	●	●	●	○
RR4/RR5	Body	IHKA Integrated automatic heating/air conditioning	●	●	●	●	●	●	○
RR4/RR5	Body	JBE Junction-box electronics	●	●	●	●	●	●	○
RR4/RR5	Body	KAFAS Camera-based driver-assistance systems	●	●	●	●	●	●	○
RR4/RR5	Body	INSTR Instrument cluster	●	●	●	●	●	●	○
RR4/RR5	Body	LHML LED main light module, left	●	●	●	●	●	●	○
RR4/RR5	Body	LHMR LED main light module, right	●	●	●	●	●	●	○
RR4/RR5	Body	NVE Night Vision Electronics	●	●	●	●	●	●	○
RR4/RR5	Body	PDC Park Distance Control	●	●	●	●	●	●	○
RR4/RR5	Body	RAD Radio	●	●	●	●	●	●	○
RR4/RR5	Body	RDC Tyre pressure control	●	●	●	●	●	●	○
RR4/RR5	Body	RSE Rear Seat Entertainment	●	●	●	●	●	●	○
RR4/RR5	Body	SDARS Satellite tuner	●	●	●	●	●	●	○
RR4/RR5	Body	SMBF Seat module, passenger	●	●	●	●	●	●	○
RR4/RR5	Body	SMBFH Seat module, passenger's side, rear	●	●	●	●	●	●	○
RR4/RR5	Body	SME Accumulator-management electronics	●	●	●	●	●	●	○
RR4/RR5	Body	SMFA Seat module, driver	●	●	●	●	●	●	○
RR4/RR5	Body	SMFAH Seat module, driver's side, rear	●	●	●	●	●	●	○
RR4/RR5	Body	SVT Servotronic	●	●	●	●	●	●	○
RR4/RR5	Body	SWW Lane change warning	●	●	●	●	●	●	○
RR4/RR5	Body	SZL Switch centre, steering column	●	●	●	●	●	●	○
RR4/RR5	Body	STML Headlight driver module, left	●	●	●	●	●	●	○
RR4/RR5	Body	STMR Headlight driver module, right	●	●	●	●	●	●	○
RR4/RR5	Body	TR SVC allround-view camera	●	●	●	●	●	●	○
RR4/RR5	Body	TBX Touchbox	●	●	●	●	●	●	○
RR4/RR5	Body	ULF-SBX Interface box	●	●	●	●	●	●	○
RR4/RR5	Body	ULF-SBX-H Interface box high	●	●	●	●	●	●	○

Model Series	Part	Systems	Ecu Info.	Read DTC	Freeze Frame	Erase DTC	Live Data	Component activation	Physical HW
RR4/RR5	Body	VM Video Module	●	●	●	●	●	●	○
RR4/RR5	Body	VSW video switch	●	●	●	●	●	●	○
RR4/RR5	Body	VTG Transfer case	●	●	●	●	●	●	○
RR4/RR5	Body	ZGM Central Gateway Control Module	●	●	●	●	●	●	○
RR4/RR5	Body	SDARS Satellite tuner	●	●	●	●	●	●	○



Service Function List

Part	Components	Status	Body Type
MAINTENANCE	CBS Reset	●	RR1/RR2/RR3 RR4/RR5
MAINTENANCE	CBS correction, vehicle data	●	RR1/RR2/RR3 RR4/RR5